

# E3EG Thermostat User Manual

Many thanks for your selection of our products and services, and also for your trust and support to us.

Search for "Smart life" from google play or App store to Download the Wifi App




- Turn on the thermostat, press and hold the key combination “” and “” Activate WIFI distribution network icon. Activat Bluetooth on your phone, open Smart Life application and press right top button „+”


## Product Specifications

- ☆ Power: 90-240Vac 50/60Hz
- ☆ Display accuracy: 0.5°C
- ☆ Probe sensor: NTC(10k)1%
- ☆ Contact capacity: 16A
- ☆ Limit temperature range: 1~70°C
- ☆ Range of temperature adjustment: 5~35°C
- ☆ Range of temperature display: 1~70°C
- ☆ Insulating condition: Normal environment
- ☆ Running program: Set per 1 week as a cycle
- ☆ Output: Switch relay
- ☆ Installation: recessed type (in the wall)
- ☆ Size(mm): 86\*86\*10

## Wiring Diagram

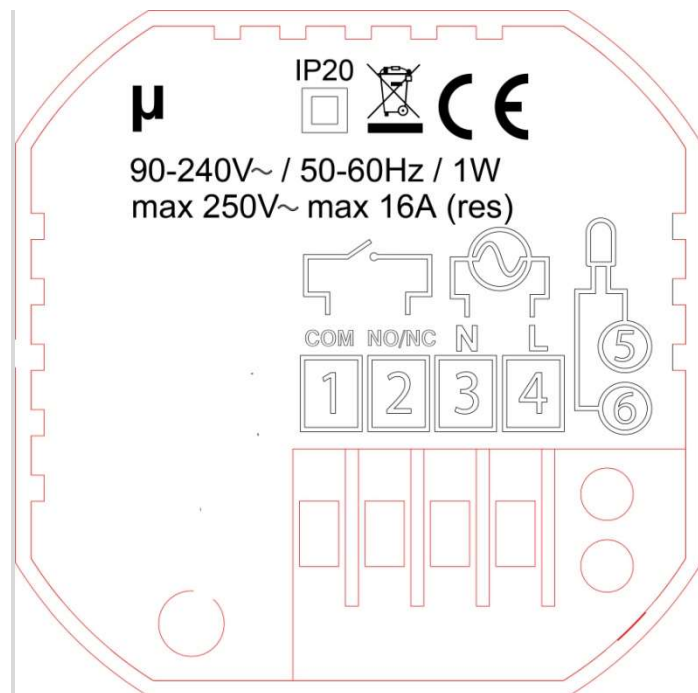

## Displays

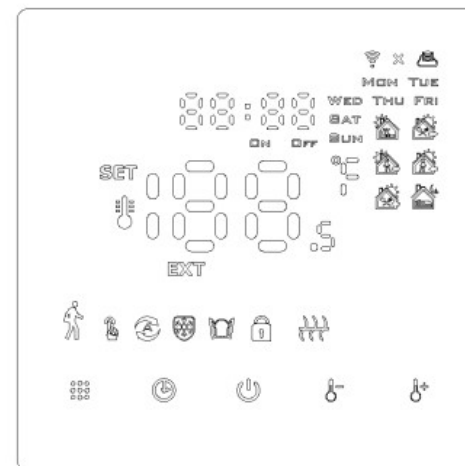

## Description of icon

- Auto mode: run preset program Manual mode Clock
- Programming mode Temporary manual mode
- Holiday mode, Holiday days and temperature can be set to run in countdown mode
- Heating,,icon disappears to stop heating External NTC sensor
- WIFI connection, flashing EZ distribution mode Child lock
- Wifi status: Disconnection Cloud icon: flashing AP distribution network mode
- Activate window function Room temp Setting temp

:Cooling mode,this icon is always displayed when switching to cooling mode and flashes when the cooling load is output

## Operation key

NO	symbols	represent
A		Turn ON/OFF: short press to turn on/ turn off
B		1. Short press  to switch automatic mode and manual mode 2. Turn on thermostat, long press  for 3-5 seconds to enter into programmable setting 3. Turn off thermostat, long press  for 3-5 seconds to enter into advanceoption A
C		1. Confirm key 2. short pressit to set time

		3. Turn on thermostat, long press it for 3-5 seconds to holiday mode setting. Appear <b>OFF</b> , press  or  change to ON, then press  to confirm opening holiday mode 4. Turn off thermostat, long press it for 3-5s to enter into advanced option B
<b>D</b>		1. Decrease key 2. Long press to lock /unlock
<b>E</b>		1. Increase key 2. Long press to inquire external sensor temperature ( only available for BN item select N3 in the advance option B) 3. In the program model, press  or  enter to temporary manual mode

### Programmable

5+2 (factory default), 6+1 and 7 models 6 times period setting for user choose. In the advanced options choose model of you need, under power on state, long press for 3-5 seconds enter into programming mode setting, then short press choose: hour, minute, time period, and press and to adjust data, finished setting, about 10 seconds will automatic save and exist.

Wake up	Leave home	Back home	Leave home	Back home	Sleep
6: 00    20°C	8: 00    15°C	11: 30    15°C	13: 30    15°C	17: 00    15°C	22: 00    15°C

### Advanced option A

Power off state, long press for 3-5 seconds to access advanced option A.

From A1 to AE, short press to choose the option, and adjust data by or , short press to switch next option. Remain about 5 seconds after finish setting will quit setting.

NO	Setting Options	Data Setting Function	Factory Default
<b>A1</b>	Measure Temperature Calibration	-9~+9°C (Displayed as the corrected room temperature value)	-1
<b>A2</b>	Start/stop working temperature difference setting	0.5-2.5°C	1°C
<b>A3</b>	Children lock setting	0: half lock 1: full lock	0
<b>A4</b>	Power on/off state memory after electricity cut	0: Thermostat on/off with memory when electrify 1: Thermostat off when electrify 2: Thermostat on when electrify	0
<b>A5</b>	Standby bright	0: Off    1: Weakly bright    2: Brighter	2
<b>A6</b>	Weekly programming selection	0: 5+2 1: 6+1 2: 7	0

<b>A7</b>	Setting temperature minimum limit	1-10°C	5°C
<b>A8</b>	Setting temperature maximum limit	20-70°C	35°C
<b>A9</b>	Low temperature protection	1-10°C When setting temp = 10°C, if press  will display <b>【--】</b> , cancel low temperature protection	5°C
<b>AA</b>	High temperature protection for external sensor	20°C-70°C When setting temp = 20°C, if press  will display <b>【--】</b> , cancel high temperature protection	45°C
<b>AB</b>	High temperature protection temperature difference setting	1-9°C	2°C
<b>AC</b>	Window function triggers temperature	5-60°C When setting temp = 5°C, if press  will display <b>【--】</b> , cancel high window function	--
<b>AD</b>	Window function running time	5-60min	10
<b>AE</b>	Restore factory defaults (Advanced Option A)	Display Ao, long press  key to whole icon show	
<b>AF</b>	Heating/Cooling mode	0: heating 1: cooling	0

### Advanced option B

Power off state, long press for 3-5 seconds to access advanced option B.

short press to choose the option, and adjust data by or , short press to switch next option. Remain about 5 seconds after finish setting will quit setting.

NO	Setting Options	Data Setting Function	Factory Default
BN	Options of sensor control	N1: Internal sensor (high temperature protection close) N2: External sensor (high temperature protection close) N3: Internal sensor control temperature, external sensor limit temperature (external sensor detect the temperature is higher than highest temperature of external sensor, thermostat will Close relay, turn off load)	N1
BC	Descaling function	0: Disable descaling function 1: Enable descaling function	0
Bo	product information	Can't be changed	
P1	Power	XXXX Kwh, long press “” to clear the data	

	consumption of previous day		
P2	Total power consumption	XXXX Kwh, long press “▼” to clear the data	
P3	Rate power of heating device	XXXX W, Setting range: 100-3500W	2000W

**Return difference:** limit valve of external sensor is 45°C for factory default (A6),value of external sensor control return difference (A3) is 2. when temperature rise to 45°C,then relay stop working and will remind high temperature production alarm. If temperature decline to 43°Crelay continue to work and heating alarm will be relieved, (it can be operated ,only when room temperature is lower than setting temperature ).

**Sensor fault display:**please choose correct working way of built-in and external sensor, if choose wrongly or sensor fault (breakdown), “E1” or “E2” will be displayed on the screen. Thermostat will stop heatinguntil the fault is eliminated

**Warranty:**

We offer the warranty of 24 months, from the sales day. The products of our company can have lifetimewarranty ,if it is not the quality problems, or beyond the warranty period, we will charge for the after-saleservice.

**Installation**

